



MODEL 208
MY 2003

Passenger Cars MY 2003

Model 208



System is also known as "Active Service System (ASSYST)" in the Workshop Information System (WIS)

Customer: _____

Repair order number: _____

Confirm work has been performed by signing below

Initial Service or Type of service last performed

Technician: _____

Determine need for type of service:

Please define type of service to be performed here!

Current odometer reading: _____

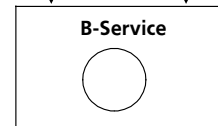
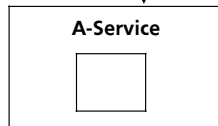
B-Service last performed at mi/km: _____
(Enter 0 if this is a vehicle's initial service)

Difference in mi/km: _____

Please note:
An A-Service must always be followed by a B-Service

Difference < 14,000 mi
22,000 km

Difference ≥ 14,000 mi
22 000 km



Determining need for A-Service or B-Service:

If the distance driven since the last "B-Service" is less (<) than 14,000 miles/22 000 km (as determined from Service Booklet or dealer records), an "A-Service" should be performed.

If the distance driven since the last "B-Service" is greater (≥) than 14,000 miles/22 000 km (as determined from Service Booklet or dealer records), a "B-Service" should be performed.

Special flat rates apply to the procedures identified with AP

Determine "Additional work" needed, if any:

(check if applicable)

See last page for "Additional work".

at approx. every: 50,000 mi/80,000 km or 4 years

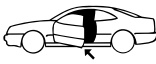
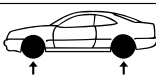
every: 2 years

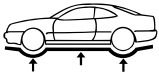
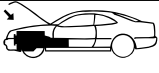
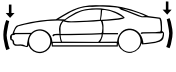
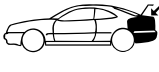
60,000 mi/96,000 km or 4 years

3 years

60,000 mi/96,000 km or 5 years

Spark plugs

completed <input checked="" type="checkbox"/>	A-Service <input type="checkbox"/>	B-Service <input type="checkbox"/>	Not O.K.
↓	↓	↓	↓
<input type="checkbox"/> Brake test on dynamometer or test drive. Check parking brake and run in according to specifications (on vehicles with 4MATIC, ASR, ETS, ESP observe instructions in Maintenance Manual!). Enter brake values in N: <div style="display: flex; justify-content: space-around; margin-top: 5px;"> front rear Parking brake </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> left _____ _____ _____ </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> right _____ _____ _____ </div>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/> AP42.00-P-4290BA
 <h3 style="margin: 0;">Vehicle passenger compartment</h3> <p>Function check</p>			
<input type="checkbox"/> Check Tele Aid by pressing SOS button to make test call to Response Center	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> Horn, headlamp flasher, hazard flashers, turn signals	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> Warning/indicator lamps, illumination and interior lighting	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> Exterior lighting incl. headlamp	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> Windshield wipers, windshield washer system	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/> AP82.35-P-8252BA
<input type="checkbox"/> Headlamp cleaning system	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> Check seat belts for damage and proper function	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/> AP91.40-P-9150Z
<input type="checkbox"/> Replace dust filter	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	AP83.00-P-8381A
<input type="checkbox"/> Reset FSS counter in instrument cluster	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
 <h3 style="margin: 0;">Wheels, brakes</h3>			
<input type="checkbox"/> Remove and reinstall wheels, rotate if necessary, does not apply for vehicles with different tire sizes front/rear		<input checked="" type="checkbox"/>	AP40.10-P-4050Z
<input type="checkbox"/> Check brake pads for lining thickness front/rear		<input checked="" type="checkbox"/>	<input type="checkbox"/> AP42.10-P-4251BA
<input type="checkbox"/> Check condition of brake discs front and rear		<input checked="" type="checkbox"/>	<input type="checkbox"/> AP42.10-P-4251BA
<input type="checkbox"/> Check thickness of brake pads by removing and reinstalling right front wheel	<input checked="" type="checkbox"/>		<input type="checkbox"/> AP42.10-P-4251BA
<input type="checkbox"/> Check condition of brake discs by removing and reinstalling right front wheel	<input checked="" type="checkbox"/>		<input type="checkbox"/> AP42.10-P-4251BA
<input type="checkbox"/> Inspect tires for damage and condition	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/> AP40.10-P-4051Z
<input type="checkbox"/> Measure tread depth, enter in mm:	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	AP40.10-P-4051Z
<div style="display: flex; justify-content: space-around; margin: 5px 0;"> LF RF LR RR </div> <div style="display: flex; justify-content: space-around; margin: 5px 0;"> outside _____ _____ _____ _____ </div> <div style="display: flex; justify-content: space-around; margin: 5px 0;"> center _____ _____ _____ _____ </div> <div style="display: flex; justify-content: space-around; margin: 5px 0;"> inside _____ _____ _____ _____ </div>			
<input type="checkbox"/> Correct tire inflation pressure	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

completed <input checked="" type="checkbox"/>	A-Service <input type="checkbox"/>	<input type="radio"/> B-Service	Not O.K.
↓	↓	↓	↓
	Vehicle underbody		
<input type="checkbox"/>		<input checked="" type="radio"/>	<input type="checkbox"/> AP00.20-P-0053BA
	Leakage - Major components Chafe marks, line routing, components. In the event of leakage, determine cause and perform repair via separate work order.		
<input type="checkbox"/>		<input checked="" type="radio"/>	<input type="checkbox"/> AP33.20-P-3353BA
<input type="checkbox"/>		<input checked="" type="radio"/>	<input type="checkbox"/> AP46.00-P-4653BA
	Check condition of front axle ball joints		
	Check condition of steering's mechanical components		
	Engine compartment		
<input type="checkbox"/>		<input checked="" type="radio"/>	<input type="checkbox"/> AP00.20-P-0053BA
	Leakage - Major components Chafe marks, line routing, components. In the event of leakage, determine cause and perform repair via separate work order.		
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="radio"/>	
	Engine oil and filter change		
			AP18.00-P-0101AE
			AP18.00-P-0101AF
	Check and correct fluid level		
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="radio"/>	<input type="checkbox"/> AP42.10-P-4210Z
	Brake system		
<input type="checkbox"/>		<input checked="" type="radio"/>	<input type="checkbox"/> AP46.00-P-4611BB
	Power steering		
<input type="checkbox"/>		<input checked="" type="radio"/>	<input type="checkbox"/>
	AC refrigerant level		
	In the event of leakage, determine cause and perform repair via separate work order.		
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="radio"/>	AP82.35-P-8210Z
	Windshield washer		
<input type="checkbox"/>		<input checked="" type="radio"/>	<input type="checkbox"/> AP13.22-P-1351Z
	Check condition of poly-V-belt		
<input type="checkbox"/>		<input checked="" type="radio"/>	<input type="checkbox"/> AP30.10-P-3022ZA
	Lubricate throttle linkage, check function and condition - Not with Engine 113		
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="radio"/>	AP88.40-P-8821BA
	Lubricate catch, safety catch and hinges on engine hood.		
	Front, rear of vehicle		
<input type="checkbox"/>		<input checked="" type="radio"/>	<input type="checkbox"/>
	Check headlamp aiming, adjust if necessary (refer to Operator's Manual for procedure)		
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="radio"/>	<input type="checkbox"/> AP82.30-P-8253G
	Check wiper blade condition		
	Trunk		
	Check		
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="radio"/>	<input type="checkbox"/> AP54.10-U-5453A
	Check battery condition using "Midtronics MCR 717" Tester		
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="radio"/>	<input type="checkbox"/>
	Correct tire inflation pressure in spare tire		

Additional Work			
completed <input checked="" type="checkbox"/>	Perform:	yes	Not O.K.
↓		↓	↓
	At approx. every 50,000 mi/80,000 km or 4 years:		
AP	<input type="checkbox"/> Check condition of drive shaft flex discs	<input type="checkbox"/>	<input type="checkbox"/> AP41.10-P-4152Z
AP	<input type="checkbox"/> Retighten lock bolts of steering. Observe torque.	<input type="checkbox"/>	<input type="checkbox"/> AP46.20-P-4671BA
	At approx. every 60,000 mi/96,000 km or 4 years:		
AP	<input type="checkbox"/> Replace air cleaner filter element	<input type="checkbox"/>	
	At approx. every 60,000 mi/96,000 km or 5 years:		
AP	<input type="checkbox"/> Replace fuel filter	<input type="checkbox"/>	AP47.20-P-0780DC
	At approx. every 150,000 mi/250,000 km or 15 years:		
AP	<input type="checkbox"/> Replace coolant	<input type="checkbox"/>	AP20.00-P-2080A
	Every 2 years		
AP	<input type="checkbox"/> Replace brake fluid	<input type="checkbox"/>	AP42.00-P-4280BA
AP	<input type="checkbox"/> Check body for paint damage by Service Advisor	<input type="checkbox"/>	<input type="checkbox"/> AP98.00-P-9850BA
AP	<input type="checkbox"/> Check chassis and supporting body parts for damage and corrosion by Service Advisor	<input type="checkbox"/>	<input type="checkbox"/> AP00.20-P-0090BA
	Every 3 years		
AP	<input type="checkbox"/> Sliding/pop-up roof: clean and grease sliding rails and sliders	<input type="checkbox"/>	AP77.20-P-7731A
	Replace spark plugs		
AP	<input type="checkbox"/> At approx. every 100,000 mi/160,000 km or 5 years	<input type="checkbox"/>	AP15.10-P-1580A